

# ZF Passenger Car Transmissions - Overview Technical Literature



## Repair Manuals

Transmission	Description	Where used	ZF Part #	Language	Old ZF Part #	Notes
4HP14	4HP14 Repair Manual	All 1036 000	1036 751 101	English		
4HP18	4HP18 Repair Manual (Saab)	Certain 1050 000	1050 751 101	English		
4HP18	4HP18 Repair Manual (Alfa, Fiat, Lancia)	Certain 1050 000	1050 751 103	English		
4HP18	4HP18 Repair Manual (PSA)	Certain 1050 000	1050 751 102	English		
4HP18FLA	4HP18FLA Repair Manual					Currently not available
4HP18FLE	4HP18FLE Repair Manual					Currently not available
4HP20	4HP20 Repair Manual (MB, PSA)	Certain 1019 000	1019 751 101	English		
4HP22	4HP22 Repair Manual (BMW)	Certain 1043 010	1043 751 110	English		
4HP22	4HP22 Repair Manual (PSA)	Certain 1043 010	1043 751 111	English		
4HP24	4HP24 Repair Manual					Currently not available
4HP24A	4HP24A Repair Manual					Currently not available
5HP18	5HP18 Repair Manual	All 1056 000	5HP18REP	English	1056 751 101	
5HP19	5HP19 Repair Manual	All 1060 000	5HP19REP	English	1060 751 101	
5HP19FL	5HP19FL / FLA Repair Manual	All 1060 030	5HP19FLREP	English	1060 751 102	
5HP19FLA	5HP19FL / FLA Repair Manual	All 1060 040	5HP19FLREP	English	1060 751 102	
5HP19HL	5HP19HL Repair Manual					Currently not available
5HP19HLA	5HP19HLA Repair Manual					Currently not available
5HP24	5HP24 Repair Manual	All 1058 000	5HP24REP	English	1058 751 101	
5HP24A	5HP24A Repair Manual	All 1058 020	5HP24AREP	English	1058 751 102	
5HP30	5HP30 Repair Manual	Certain 1055 000	5HP30REP	English	1055 751 101	
6HP26	6HP26 Repair Manual (CD Version Only)	All 1068 010	1068 766 702	English		
6HP26 A61	6HP26 A61 Repair Manual (CD Version Only)	All 1068 030	1068 766 703	English		
6HP19	6HP19 Repair Manual (CD Version Only)	All 1071 010	1071 766 701	English		
6HP19A	6HP19A Repair Manual (CD Version Only)	All 1071 040	1071 766 702	English		

## Functional Descriptions

Transmission	Description	Where used	ZF Part #	Language	Old ZF Part #	Notes
4HP20	4HP20 Functional Description (MB, PSA, Renault)	Certain 1019 000	1019 754 101	English		
5HP18	5HP18 Functional Description	All 1056 000	5HP18FD	English	1056 754 101	
5HP19	5HP19 Functional Description	All 1060 000	5HP19FD	English	1060 754 102	
5HP19FL	5HP19FL / FLA Functional Description	All 1060 030	5HP19FLFD	English	1060 754 101	
5HP19FLA	5HP19FL / FLA Functional Description	All 1060 040	5HP19FLFD	English	1060 754 101	
5HP19HL	5HP19HL / HLA Functional Description					Currently not available
5HP19HLA	5HP19HL / HLA Functional Description					Currently not available
5HP24	5HP24 / A Functional Description	All 1058 000	5HP24FD	English	1058 754 101	
5HP24A	5HP24 / A Functional Description	All 1058 020	5HP24FD	English	1058 754 101	
5HP30	5HP30 Functional Description	All 1055 000	5HP30FD	English	1055 754 101	
6HP	6HP BMW Functional Description (CD Version Only)	All 1068 010 ____, 1070 010 ____, & 1071 010 ____	1068 766 701	English		BMW ONLY
6HP	6HP AUDI Functional Description (CD Version Only)	All 1068 030	1068 766 704	English		AUDI ONLY

Note: 4-Speed Functional Descriptions only available for 4HP20

# ZF Passenger Car Transmissions - Overview Technical Literature



## Valve Body Information

Transmission	Description	Where used	ZF Part #	Language	Old ZF Part #	Notes
All 5-Speed	5-Speed Valve Body Manual	All 5-Speed	5HPVBMAN	English		

## Wall Charts

Transmission	Description	Where used	ZF Part #	Language	Old ZF Part #	Notes
4HP14	4HP14 Wall Chart - Explosive Picture (Peugeot)	All 1036 000	AAAAZFS014	English		
4HP18	4HP18 Colour Wall Chart	All 1050 000	1050 764 701	Eng/Ger		
4HP18	4HP18 Wall Chart - Explosive Picture (Saab)	Certain 1050 000	AAAAZFS017	English		
4HP20	4HP20 Wall chart Wall Chart - Explosive Picture	All 1019 000	1019 764 001	Eng/Ger		
4HP22	4HP22 Colour Wall Chart	All 1043 010	1043 764 702	Eng/Ger		
4HP22	4HP22 / 24 Wall Chart - Explosive Picture	All 1043 010	AAAAZFS016	English		
4HP24	4HP22 / 24 Wall Chart - Explosive Picture	All 1043 030	AAAAZFS016	English		
5HP18	5HP18 Colour Wall Chart	All 1056 000	1056 764 701	Eng/Ger		
5HP18	5HP18 Wall Chart - Explosive Picture	All 1056 000	AAAAZFS018	English		
5HP19	5HP19 Wall Chart - Explosive Picture	All 1060 000	1060 764 001	Eng/Ger		
5HP19FL	5HP19FL / FLA Wall Chart - Explosive Picture	All 1060 030	1060 764 002	Eng/Ger		
5HP19FLA	5HP19FL / FLA Wall Chart - Explosive Picture	All 1060 040	1060 764 002	Eng/Ger		
5HP19HL	5HP19HL / HLA Wall Chart - Explosive Picture	All 1060 050	1060 764 003	Eng/Ger		
5HP19HLA	5HP19HL / HLA Wall Chart - Explosive Picture	All 1060 060	1060 764 003	Eng/Ger		
5HP24	5HP24 Wall Chart - Explosive Picture	All 1058 000	1058 764 001	Eng/Ger		
5HP24A	5HP24A Wall Chart - Explosive Picture	All 1058 020	1058 764 002	Eng/Ger		
5HP30	5HP30 Colour Wall Chart	All 1055 000	1055 764 701	Eng/Ger		